




i

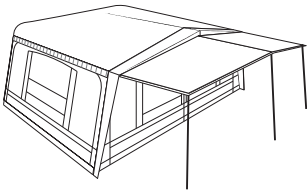


Standard Zinox / CarbonX

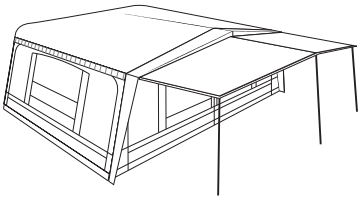


Standard Zinox Mega

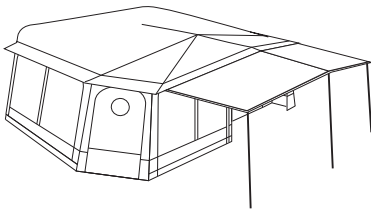


Prisma Zinox Mega

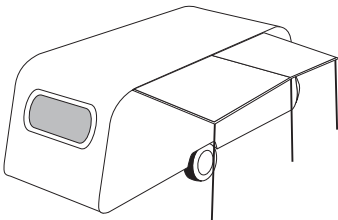

Caravan



x 3




x 2



x 2



x 1



x 2 G20-21




x 2 G20-21








x 3

# Standard Zinox / CarbonX

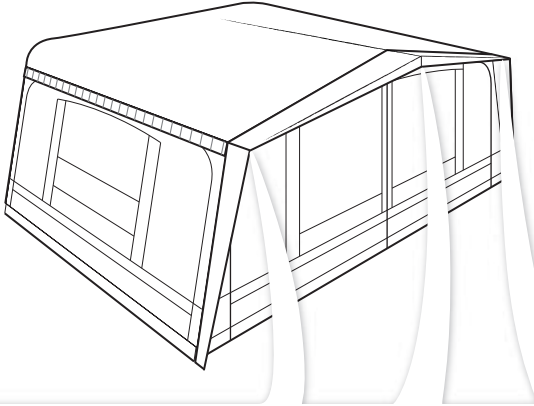


1

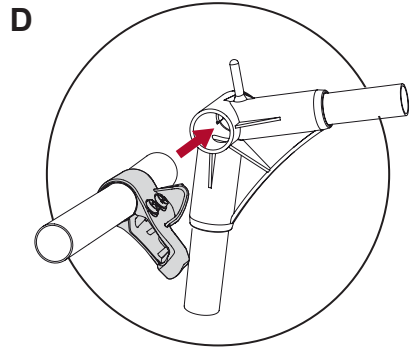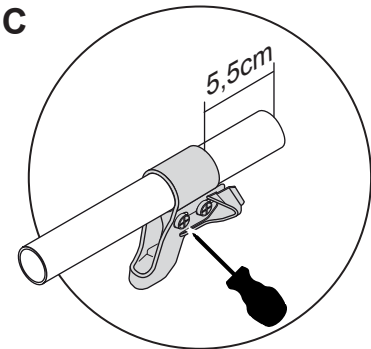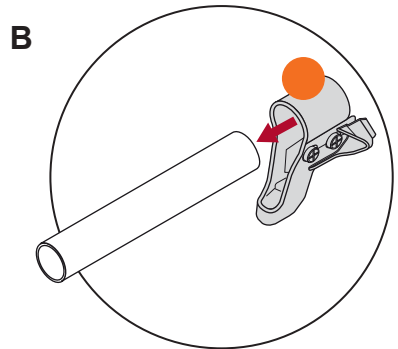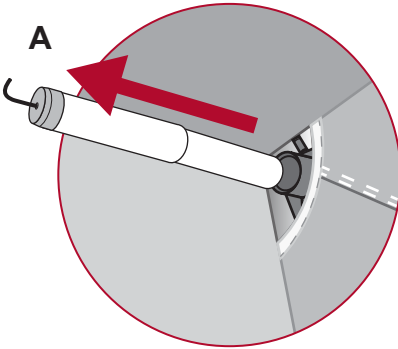

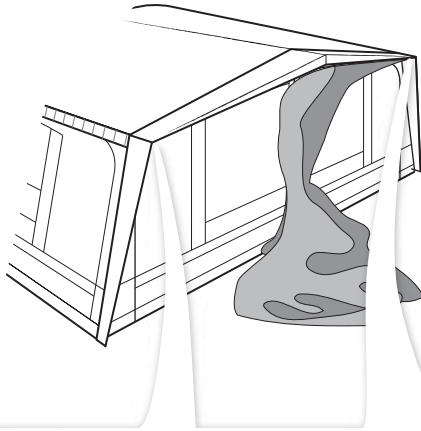


2



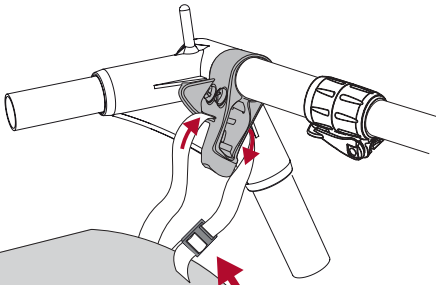






Eclipses

Do not tighten




3



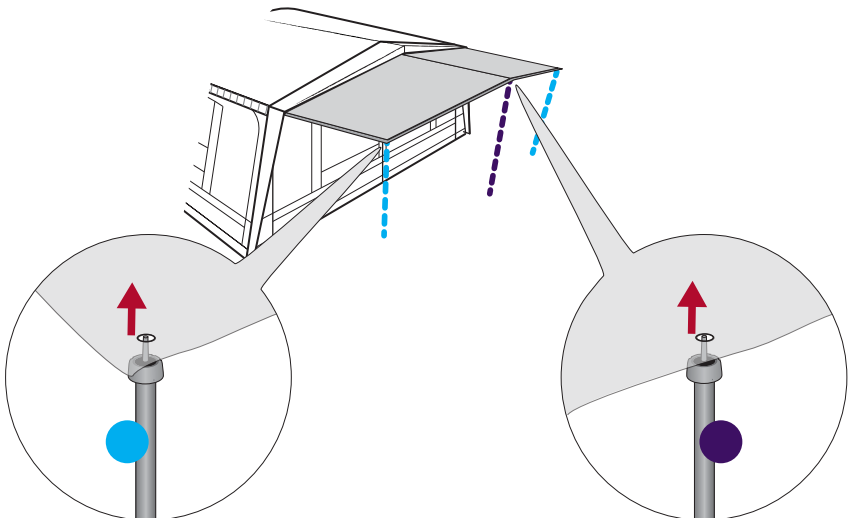


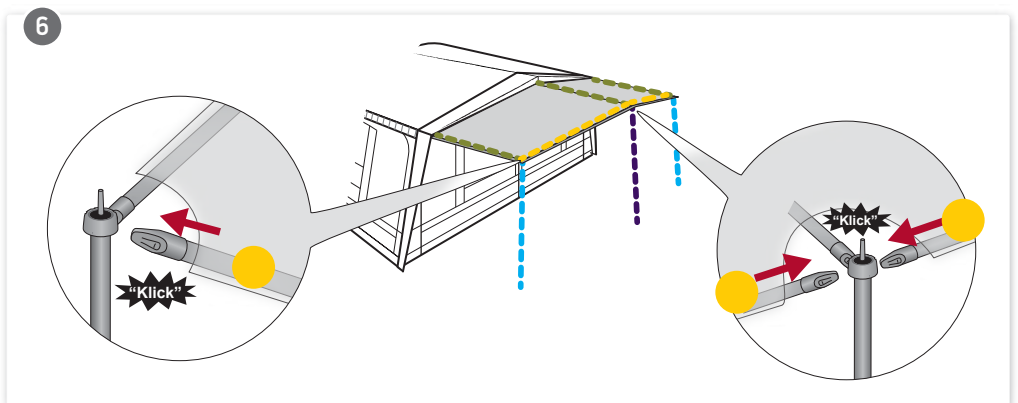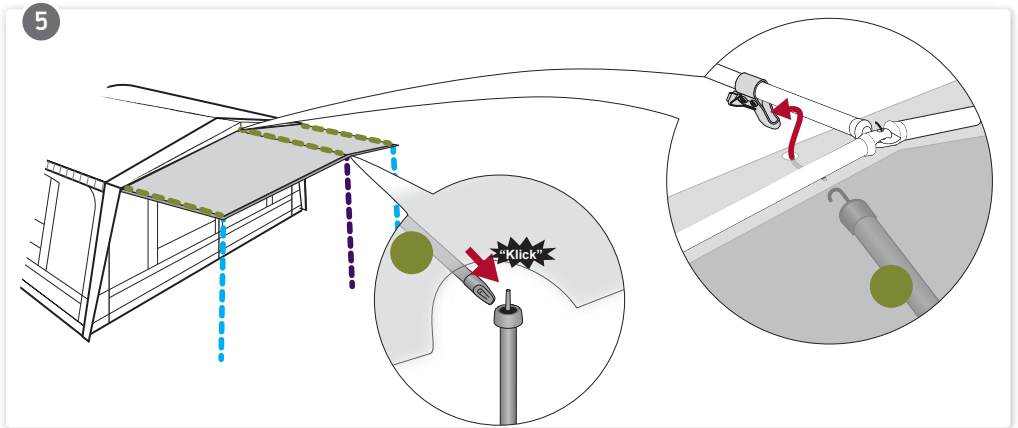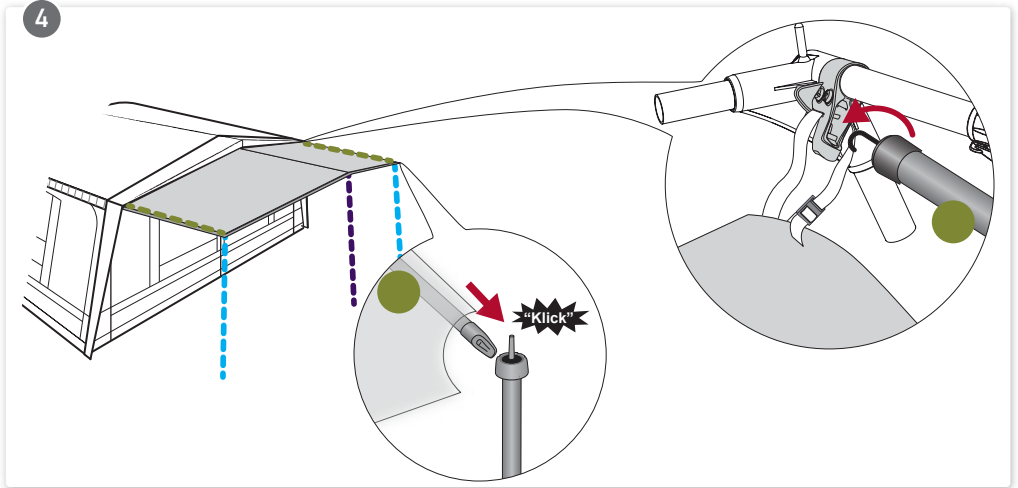

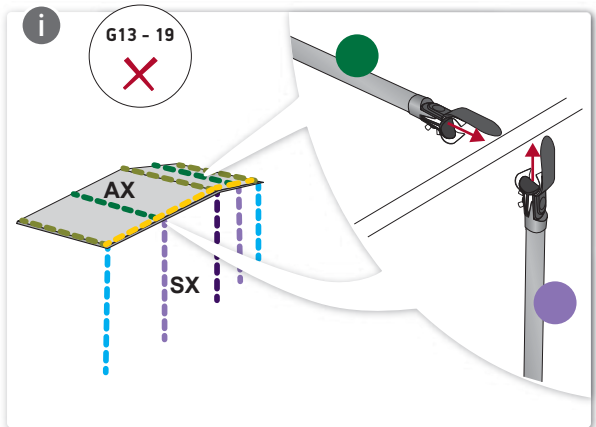
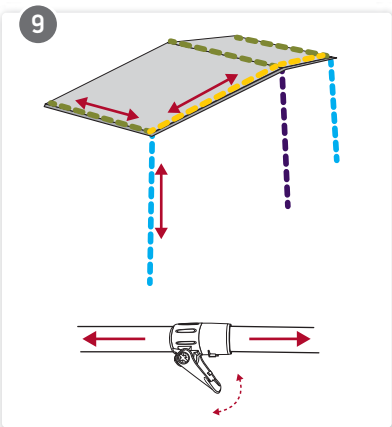
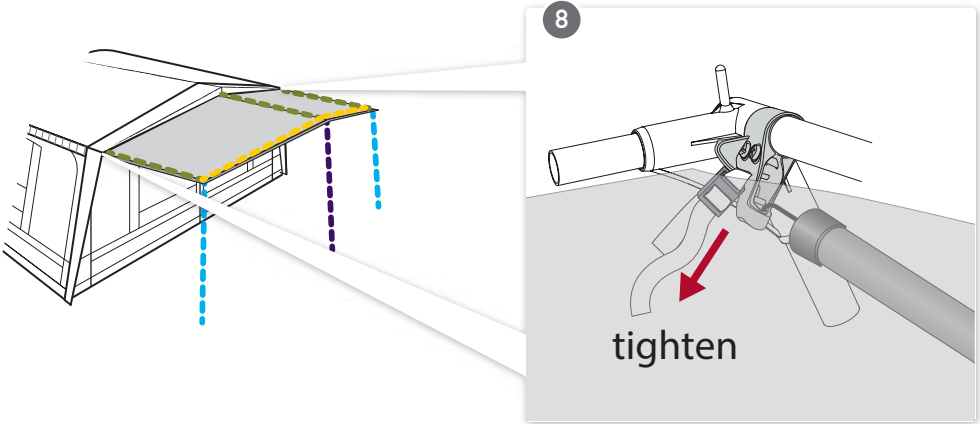
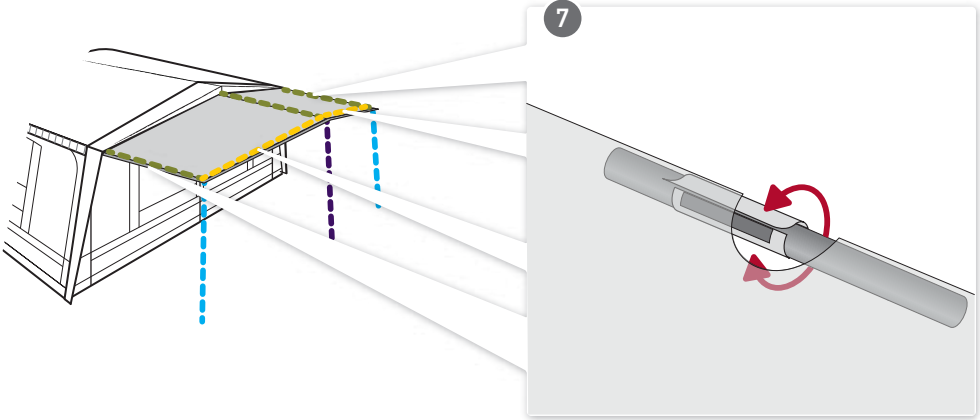


# Standard/Prisma Zinox Mega

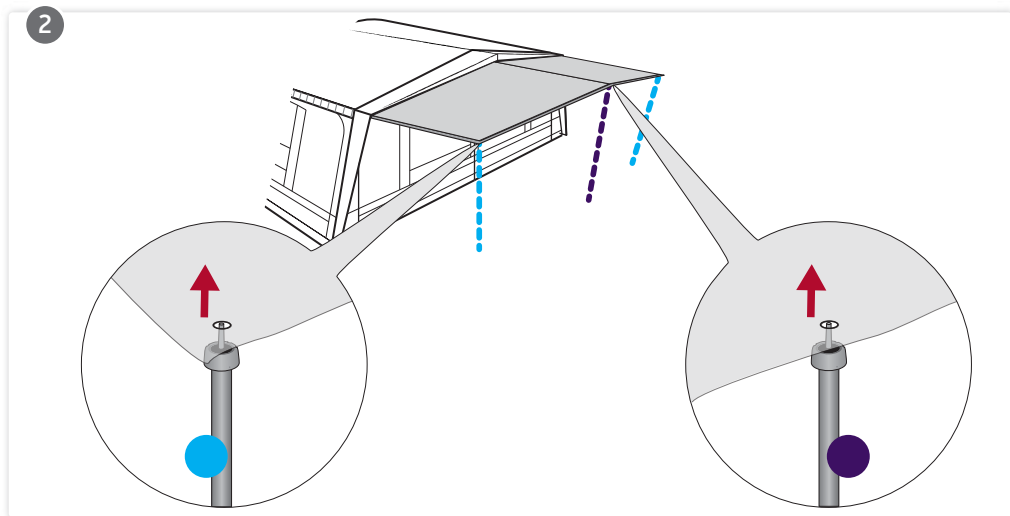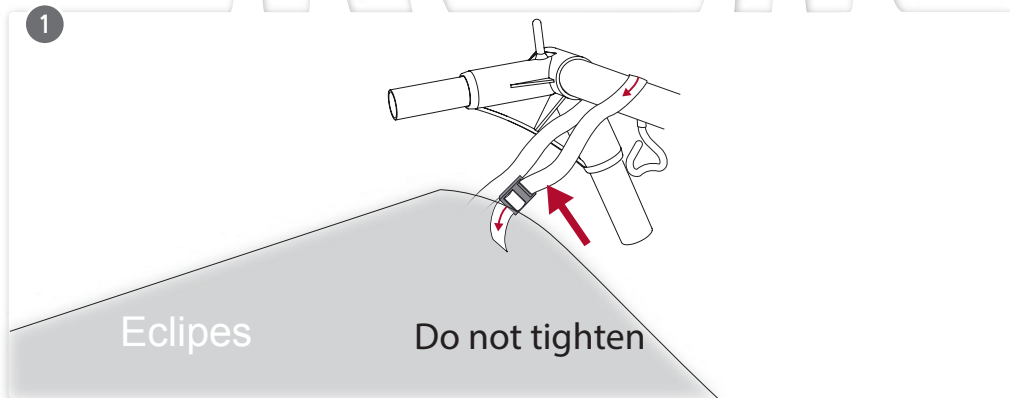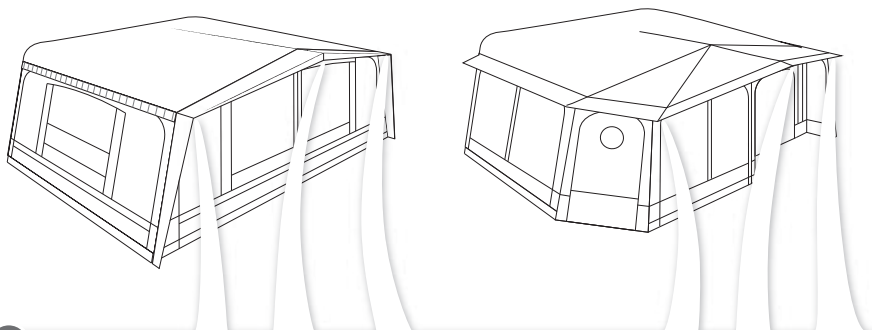


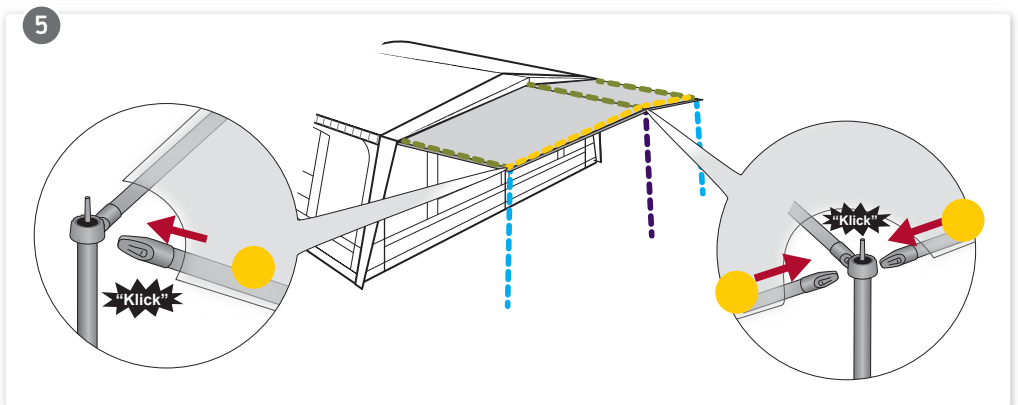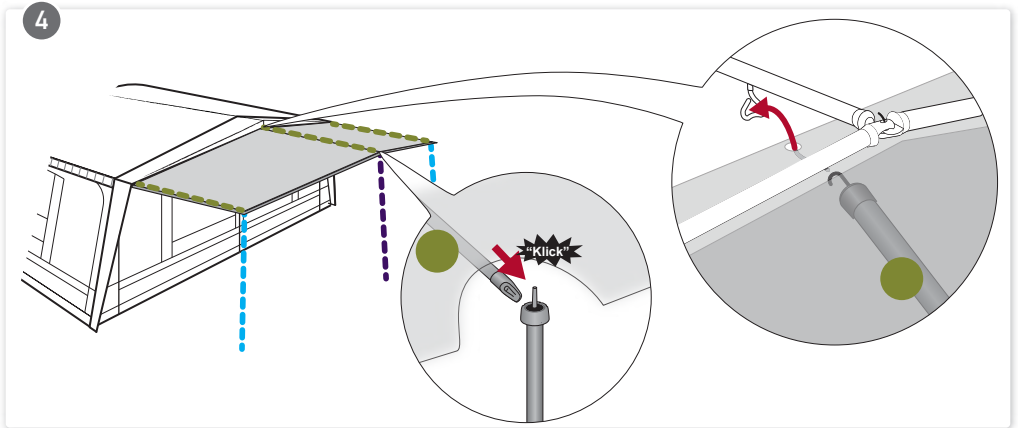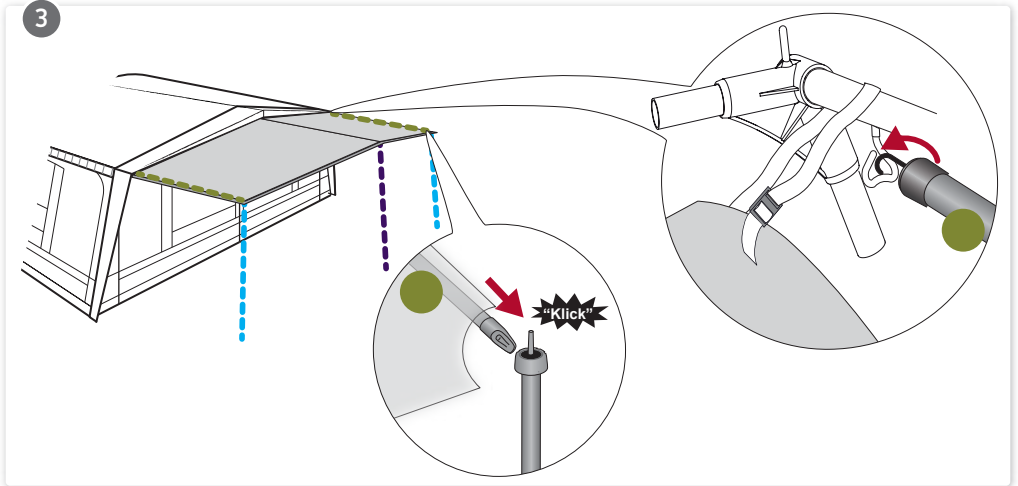




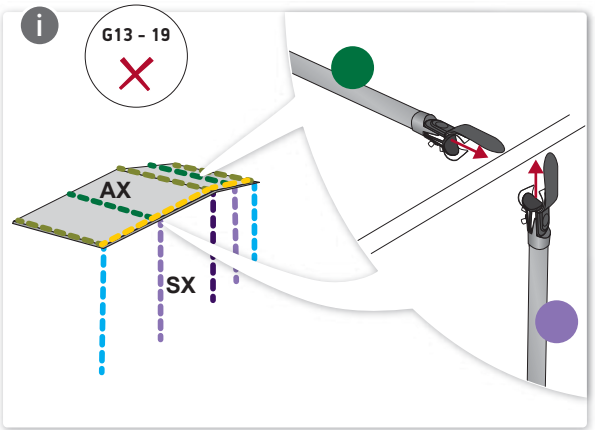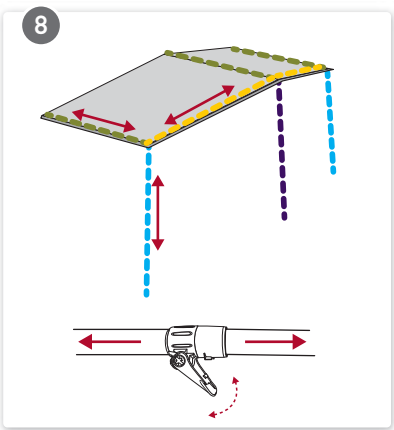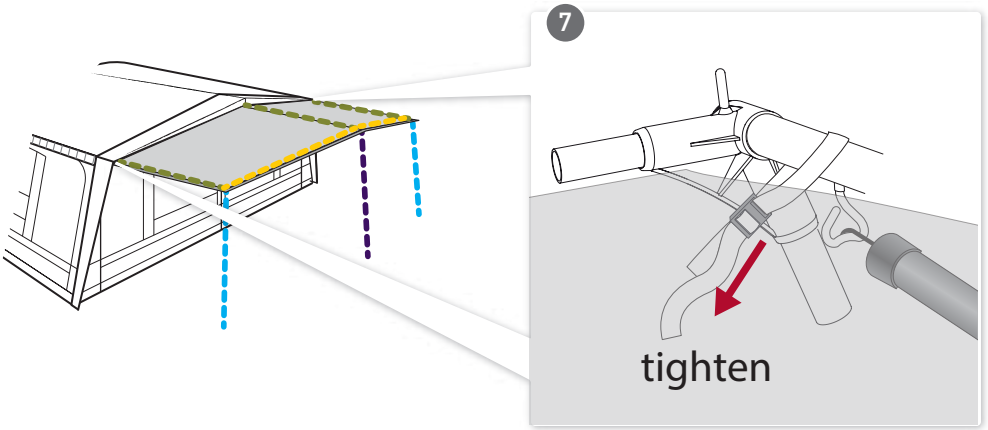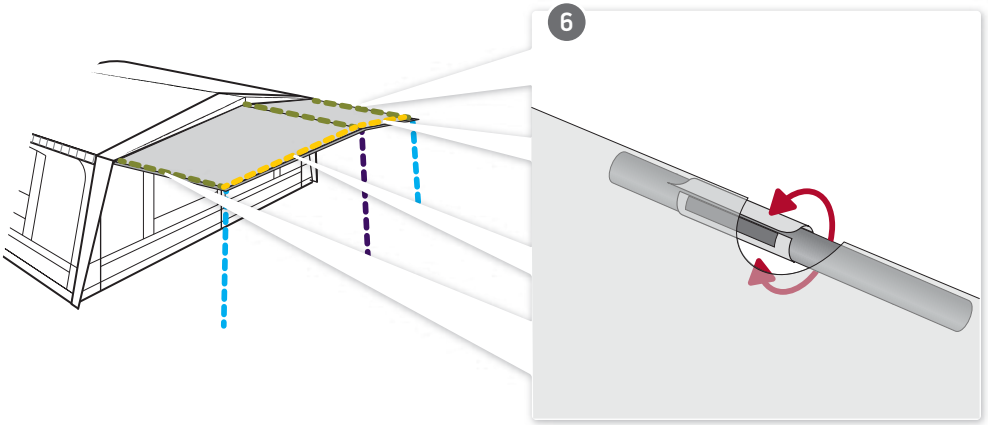


# Caravan

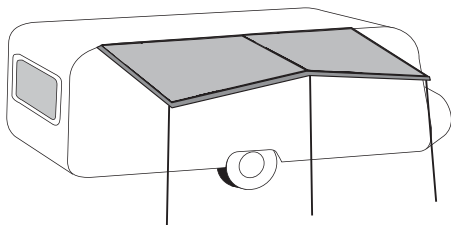


1

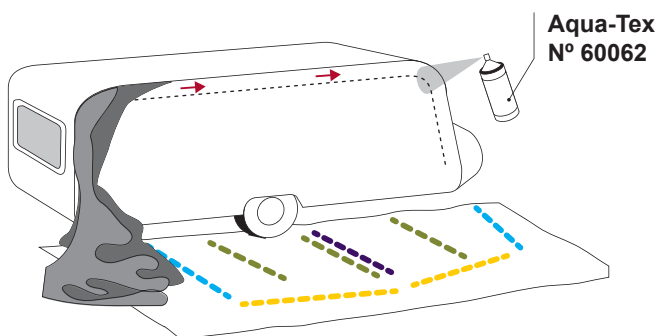

2

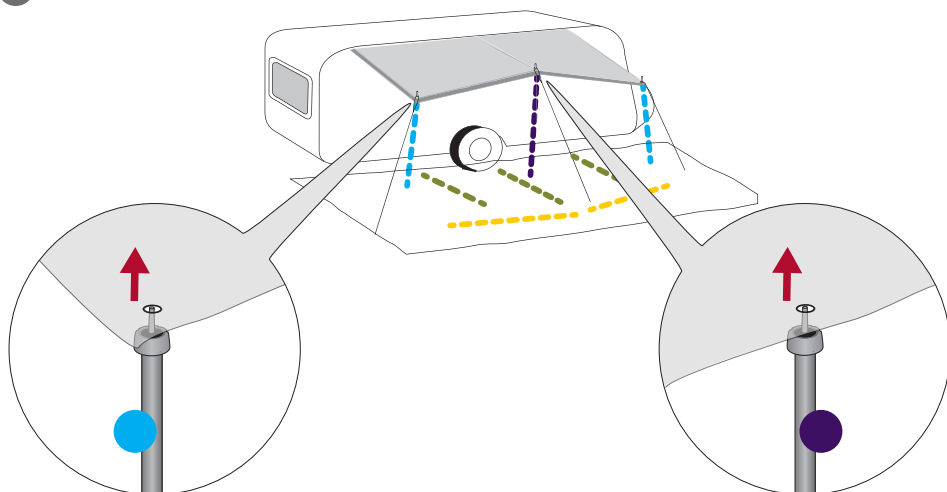

3

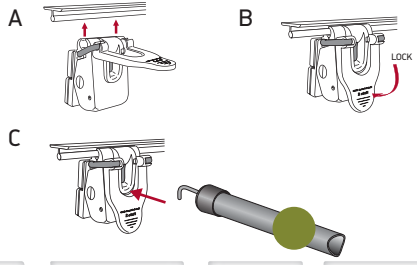


FixOn2 (Not included)






G13 - 19 x 3 pcs.  
G20 - 21 x 5 pcs.


4

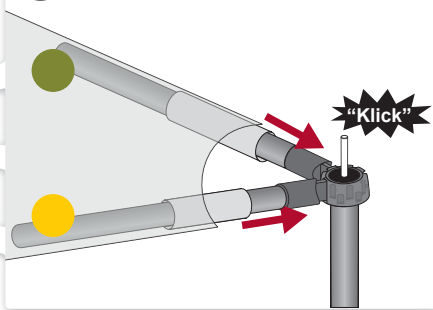

5

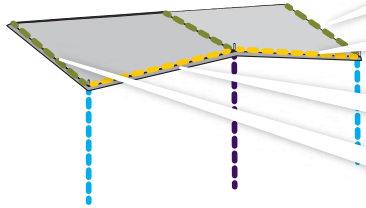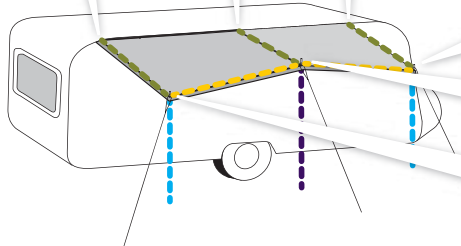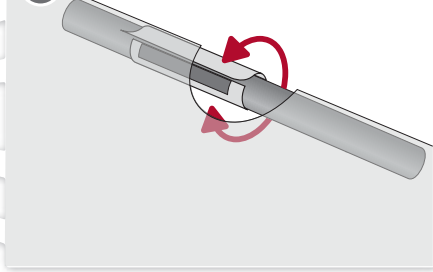

6

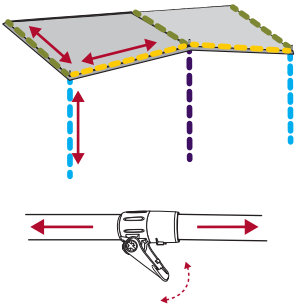

i

G13 - 19  
X

